


## L28 EconOmist® Standard Lubricators

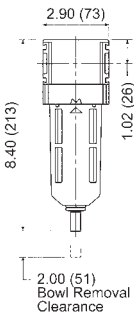

with metal bowl

**Features:**

- 6.11 oz. bowl
- manual drain
- high flow capacity
- can be filled under pressure
- To adjust and set oil delivery rate the unit must be pressurized and air must be flowing through the unit. Turn the sight dome, located on the top of the unit, counter clockwise to initiate oil delivery. If flow increases or decreases, the oil delivery rate will increase or decrease proportionally. Turning the sight dome clockwise will stop all oil delivery.
- maximum operating conditions:
  - transparent bowl: **150 PSIG** (10.3 bar) and **32°F to 125°F (0°C to 52°C)**
  - metal bowl: **250 PSIG** (17.2 bar) and **32°F to 150°F (0°C to 66°C)**


Size	Flow (SCFM)	Transparent Bowl Part #	Metal Bowl Part #
3/8"	176	<b>L28-03A</b>	<b>L28-03AMB</b>
1/2"	184	<b>L28-04A</b>	<b>L28-04AMB</b>
3/4"	200	<b>L28-06A</b>	<b>L28-06AMB</b>

SCFM ratings at 150 PSIG inlet pressure.

## L30 EconOmist® Standard Lubricators



with metal bowl

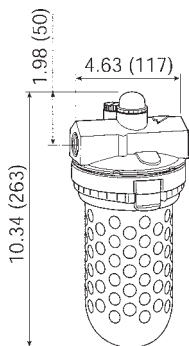**Features:**

- 26 oz. bowl
- transparent bowl: no drain  
metal bowl: manual brass petcock drain
- can be filled under pressure
- The rate of oil delivery may be controlled by turning the adjusting screw counter clockwise for more and clockwise for less oil delivery. The oil delivery rate will change automatically to deliver more oil during higher air flows and less oil for air flows lower than the one at which the setting was made.
- maximum operating conditions:
  - transparent bowl: **150 PSIG** (10.3 bar) and **32°F to 125°F (0°C to 52°C)**
  - metal bowl: **200 PSIG** (13.8 bar) and **32°F to 150°F (0°C to 66°C)**

Size	Flow (SCFM)	Transparent Bowl Part #	Metal Bowl Part #
3/4"	196	<b>L30-06A</b>	<b>L30-06AMB</b>
1"	374	<b>L30-08A</b>	<b>L30-08AMB</b>

SCFM ratings at 120 PSIG inlet pressure.

See pages 401 to 405 for accessories.

See page 367 for air tool lubricant.



FRL's are designed for air service only, unless otherwise indicated.